

FORMATTING FLASH MEMORY CARDS

PCMCIA CARDS IN THE RDC-1

- 1) INSERT THE CARD INTO THE CAMERA, ENSURING THAT THE WRITE PROTECTION IS OFF.
- 2) WHILE THE CAMERA IS ON **PLAY** PRESS THE **DATE** BUTTON AND THE **FLASH/ERASE** BUTTON AT THE SAME TIME. WITHIN A FEW SECONDS, YOU SHOULD SEE **FO** APPEAR IN THE LCD DISPLAY.
- 3) RELEASE THE **FLASH/ERASE** BUTTON AND PRESS THE **SHUTTER RELEASE** BUTTON WHILE STILL PRESSING THE **DATE** BUTTON. **FO** WILL BEGIN TO BLINK, AND A BUZZER WILL SOUND. **“0”** WILL THEN APPEAR IN THE LCD DISPLAY. THAT IS THE BEGINNING OF YOUR COUNT.

ATA CARDS IN THE RDC-2

- 1) INSERT THE CARD INTO THE CAMERA, ENSURING THAT THE WRITE PROTECTION IS OFF.
- 2) WITH THE CAMERA ON **PLAY**, OPEN THE SIDE COVER OF THE CAMERA AND PRESS THE **FORMAT** BUTTON . STOP PRESSING WHEN **FO** APPEARS ON THE DISPLAY PANEL.
- 3) PRESS THE **SHUTTER RELEASE** BUTTON FOR AT LEAST 2 (TWO) SECONDS TO BEG IN INITIALIZATION. WHEN THIS IS COMPLETE, A BUZZER WILL SOUND AND **“0”** WILL BE DISPLAYED IN THE DISPLAY PANEL.