

## Setting the SCSI ID Number on the Ricoh MP6200S

SCSI ID	PIN #2	PIN #3	PIN #4	JUMPER	NOTE
0	OFF	OFF	OFF		Default
1	ON	OFF	OFF	2	
2	OFF	ON	OFF	3	
3	ON	ON	OFF	2 3	
4	OFF	OFF	ON	4	
5	ON	OFF	ON	2 4	
6	OFF	ON	ON	3 4	
7	ON	ON	ON	2 3 4	SCSI Board

Please see diagram below

Back View of MP6200S Drive

