


RICOH

DR-2

Remote Control Unit

Operation Manual

Before using your Remote Control Unit, read this manual carefully to understand the proper operation of the unit. Please keep this manual handy for easy reference.

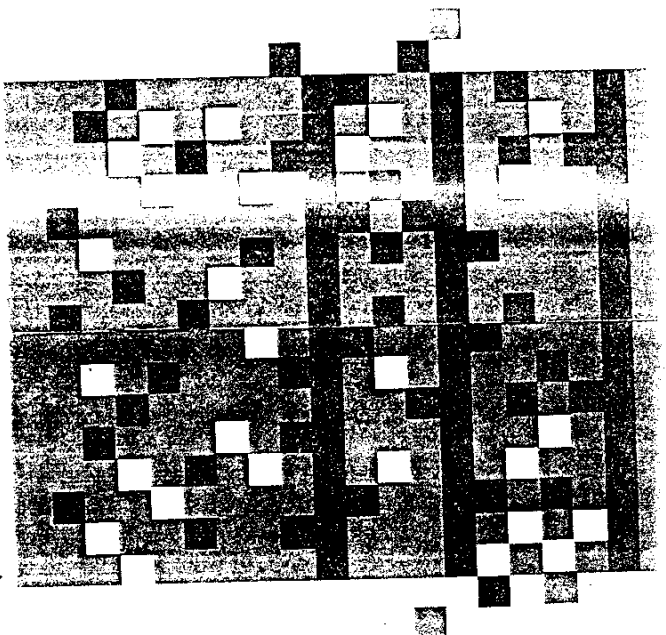

RICOH CO., LTD.

3-32-3 Higashi-Shinagawa Shinagawa-ku, Tokyo 140 JAPAN

L6103332

Main Features

Remote operation

With the Remote Control Unit, you can playback or erase images from the camera even at a distance.

Program settings

The program playback feature allows you to select a sequence of images for automatic or manual playback, determine the automatic playback interval (in seconds), and confirm your settings.

- This booklet may not be copied in whole or in part without the express written permission of the publisher.
©1996 Ricoh Co., Ltd.
- The contents of this manual are subject to change without notice.
- Considerable care was taken in the preparation of this manual. However, if any part of the manual is unclear or incorrect, please contact us at the address indicated on the back cover.

About this manual:

Thank you for purchasing the DR-2 Optional Remote Control Unit for the Ricoh RDC-2 Digital Camera. This manual contains information on the proper use and handling of your new equipment. To fully benefit from the features of this Remote Control Unit, read this manual carefully, and keep it available for easy reference.

A note about recorded files...
We are confident that your digital camera and memory card will offer you years of reliable service. However, Ricoh cannot be responsible for any loss of or damage to recorded images if you experience malfunctions during recording or playback.

About your warranty:

This device is made to domestic specifications. The warranty is effective only within the country of purchase. Should it malfunction while you are abroad, we cannot be responsible for the cost or lack of availability of servicing in other countries.

Table of Contents

Features	1
Contents	2
Safety Precautions	4
Before using the Remote Control Unit	5
Live Monitoring Function	7
Display Function	10
Playback Function	11
Erasing an Image	14
Program Setting	16
Inserting the Battery	27
Handling Precautions	29
Maintenance and Storage	29
Troubleshooting	30
Specifications	31

Safety Precautions

Symbols used in this manual

The symbols shown below appear in this manual and on the camera display. They are intended to ensure the safe use of your new camera and accessories, and to prevent property damage and injury to you and others. The meanings of these symbols are explained below.

- ⚠ **Warning** This symbol indicates mishandling that may result in a serious injury or even death.
- ⚠ **Caution** This symbol indicates mishandling that may cause injury to the user as well as damage to objects.

2

Before using the Remote Control Unit

Confirming the package contents

- Check the packaging to ensure you have received the following items. Read the warranty, then store it in a safe place.
- Remote control unit 1
 - Lithium battery (installed in Remote Control Unit) 1
 - Operation manual (this booklet) 1
 - Warranty 1

Connecting a monitor

When using the Remote Control Unit, connect the camera to a Hitachi DM-2 LCD Monitor (Optional) or a TV monitor.


To ensure safe operation of your new equipment, please observe the following precautions.

- ⚠ **Warning** The battery used in this unit is toxic if swallowed. After removing the battery from your Remote Control Unit, do not leave it in reach of children. If the battery is swallowed, contact a physician immediately.
- ⚠ **Caution** Never put the battery into a fire, and never short, heat, charge, or disassemble the battery. Doing such could cause the battery to explode, resulting in fire, and/or personal injury, and damage to the surrounding area.

3

Description of the Remote Control Unit

With the Remote Control Unit, you can record sounds and images and play them back up to approximately 5 m (16 ft.) from the camera. Before operating confirm that the lithium battery is installed in the Remote Control Unit.

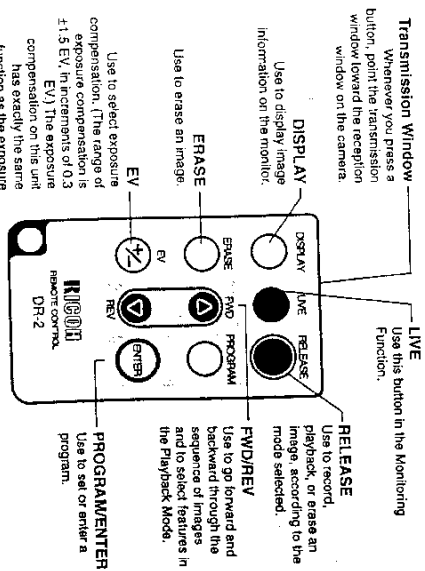


When you press a button, point the transmission window toward the camera.

5

Live Monitoring Function

This function allows you to view, on a monitor, the images being captured by the camera. It also allows you to manually adjust the focus during recording.

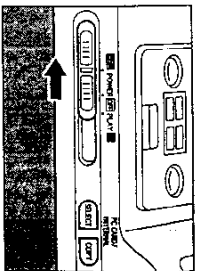

2. Slide the main switch on the camera to **RECORD**, then turn on the power to the LCD Monitor or to the TV monitor.

1. Connect the camera to the LCD Monitor or to a TV monitor.

Note: While monitoring the image viewed by the camera, you cannot switch between the following functions. These functions must be selected prior to viewing the image: Display Mode, Recording Mode, drive selection, date and time display, and Flash Mode.


Note: To connect the camera to the LCD Monitor, refer to the LCD Monitor manual or to the operation manual supplied with the camera. To connect the camera to a TV monitor, refer to the operation manual supplied with the camera.

Button Functions


Remote control button	Function	Refer to page
RELEASE	Same function as the camera's RELEASE button.	—
LIVE	For monitoring an image while recording.	P. 7
EV	For compensating exposure in steps of ± 0.3 EV.	P. 9
	Adjusts focus during monitoring.	P. 8
	Increases or decreases Exposure compensation amount.	P. 9
FWD/REV	Selects image.	P. 12
	Moves cursor.	P. 17
DISPLAY	Shows screen display.	P. 10
ERASE	Erases an image.	P. 15
PROGRAM	Sets and playback programs.	P. 17
ENTER	Enters the selection.	P. 17

- Notes:**
- When Still Picture Mode is selected during recording, the shutter is released approximately two seconds after RELEASE is pressed.
 - The RELEASE button on the Remote Control Unit cannot be used when a file is being copied or when a memory card is being initialized in the camera.


6

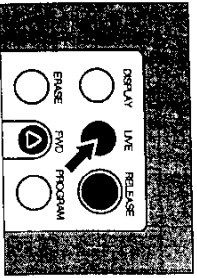

3. **Press LIVE.**
The image is displayed on the LCD Monitor or on the television screen for monitoring.

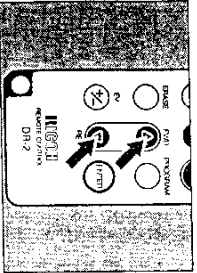

4. To adjust the focus, press FWD or REV, then press RELEASE.

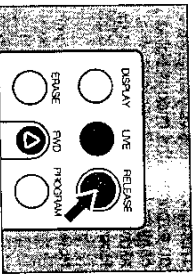

5. To record, press RELEASE on the Remote Control Unit.

Note: If the flash is recharging, the image may not appear on the monitor.

To cancel the settings: Press LIVE a second time.

7

Exposure compensation: If you adjust the exposure compensation while monitoring, the EV compensation value will appear on the display. Exposure compensation can be performed during monitoring, so that you can view the change in screen brightness as you adjust the EV value. To display the EV value on the LCD Monitor or the TV monitor screen, press +/-, then press FWD or REV to set the value. To increase the exposure compensation by 0.3 EV, press FWD. To decrease the exposure compensation by 0.3 EV, press REV. Press +/- again to cancel the setting.


Important: The exposure compensation can be set to ± 1.5 EV, however screen reflects brightness change only for the compensation range of +1.5 EV to -0.6 EV is displayed on the screen.

Display Function

Use this function during playback to display such information as the date and time the image was recorded. Before using this function, make sure the main switch on the camera is set to [PLAY (PC)].


Information Display Function

Depress the DISPLAY button to cycle through the information display for the current image.

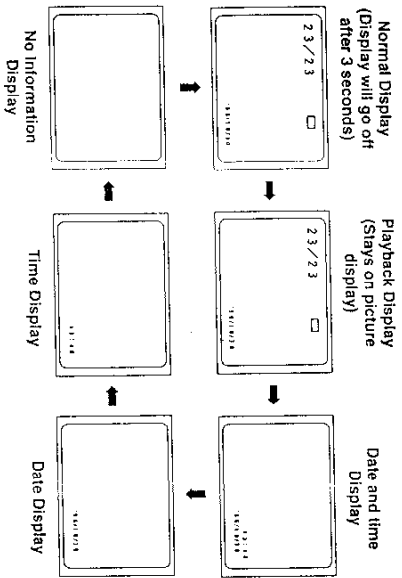


Playback Function

The PLAY function allows you to playback recorded images. Before using this function, make sure the camera is connected to the LCD Monitor or to a TV monitor.

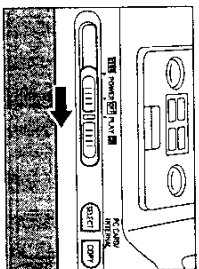


Preparing the camera

- Slide the camera's main switch to [PLAY (PC)]. The most recently recorded image will be played back.

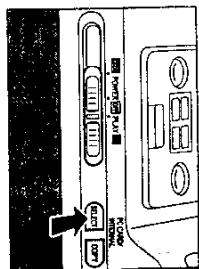

- If a memory card is inserted in the camera, you can select the desired drive. Press and hold SELECT for approximately one second to change drives.

Important: Always turn off the power before removing or inserting a memory card. For details on changing drives, refer to the operation manual provided with the camera.

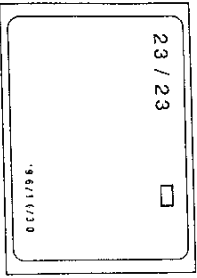


Playback Still Picture

- Use the FWD/REV buttons on the Remote Control Unit to select an image to playback. To move to the next image, press FWD.


To move to the previous image: press REV.

To playback the file: press RELEASE.

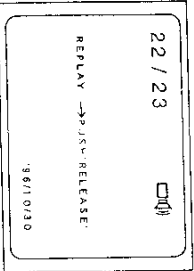


Playback Still Picture and Audio

- Press RELEASE on the Remote Control Unit to playback the sound. After playback has completed, the settings will return to the state they were in before playback. To playback the image, press RELEASE.

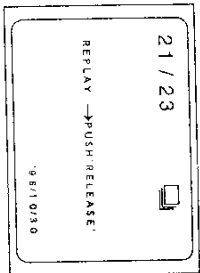

Playback Continuous Still Picture

- Press RELEASE on the Remote Control Unit to view the frames in sequence. After playback has completed, the settings will return to the state they were in before playback.

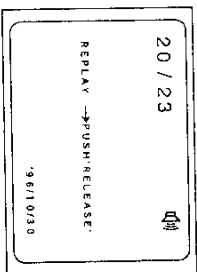

Playback Audio

- Press RELEASE on the Remote Control Unit to playback an Audio. After playback, the settings will return to the previous state prior to playback.

Using single-frame advance:

Press RELEASE to pause during playback, then press FWD to advance to the next frame.

Using single-frame reverse:

Press RELEASE to pause during playback, then press REV to view the preceding frame.

Repeat:

To playback the same image again, press RELEASE again. To playback the image, press RELEASE.

Advancing the counter:

Press RELEASE to pause during playback, then press FWD to advance the counter. (In this case, no sound is played.) The counter will continue to advance as long as you hold down FWD.

Reversing the counter:

Press RELEASE to pause during playback, then press REV to reverse the counter. (In this case, no sound is played.) The counter will continue to reverse as long as you hold down REV.


Repeat:

To repeat playback of an image, press RELEASE again. Playback will begin from the time displayed on the counter.


Erasing an Image

You can easily erase recorded images. Before using this function, however, make sure that the camera is connected to the LCD Monitor or to a TV monitor.

Important: Erased images cannot be recovered! Before erasing, double-check the number of the image you intend to erase.

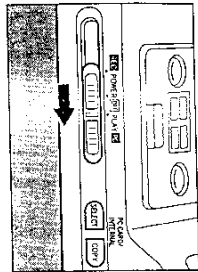


1. Slide the camera's main switch to [PLAY (PC)].

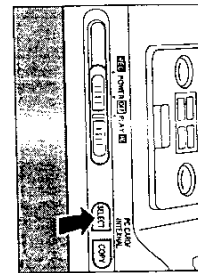

2. If a memory card is inserted into the camera, select the desired drive. Press and hold **SELECT** for approximately one second to change drives.


Important: Always turn off the power before removing or inserting a memory card. For details on changing drives, refer to the operation manual supplied with the camera.

Select image to display with **FWD/REV**
To erase, press **RELEASE**
To cancel, press **ERASE**

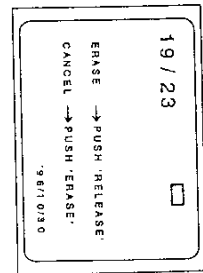


3. Press **ERASE** on the Remote Control Unit to display the Erase mode selection on the monitor.

Note: Continuous Still Pictures and Audio cannot be erased when paused during playback.

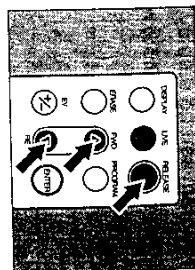

4. Press **FWD** or **REV** to select the image to be erased, then press **RELEASE**.

To cancel the settings: Press **ERASE** again.

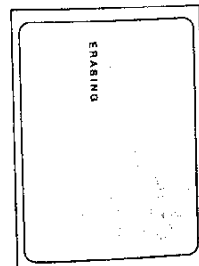

5. "Erasing" is displayed on the monitor.

Notes:

- When an image is erased, the image numbers of succeeding images decrease by one.
- The time required to erase an image varies depending on the type of memory card used and the type of image recorded.



Program Setting

You can create a playback program to playback images in a set sequence, at set intervals, and with a particular playback method. This feature is very convenient for making presentations. Before using this function, make sure that the main switch is set to [PLAY (PC)].

Important: If the battery is removed from the camera for more than two weeks, the program settings will be lost. Be sure to leave the battery in the camera.

Program setting display


Program settings can be made with the following displays.

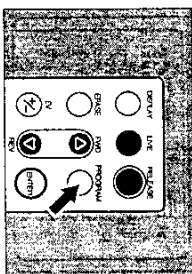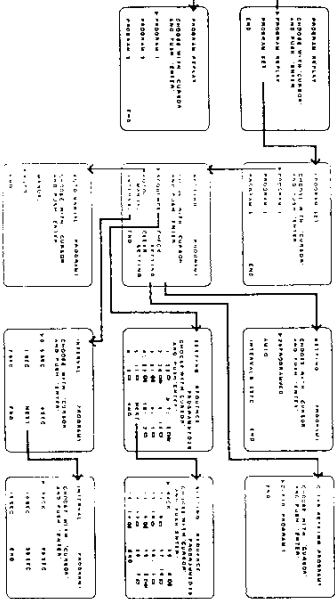

Program settings


First, specify the desired drive (memory card or on-board memory). See p. 11

1. Press **PROGRAM**






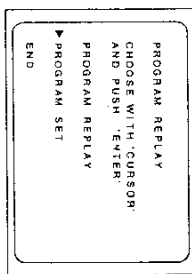


2. Press **FWD** or **REV** to move the cursor to "PROGRAM SETTING"

Note: To cancel the operation, select "END"

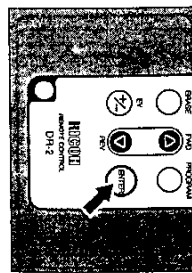

3. Press **ENTER**. The Program settings screen is displayed.

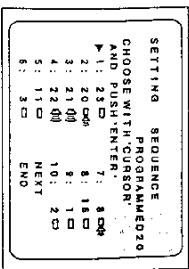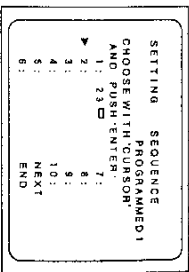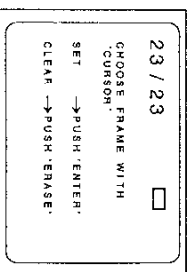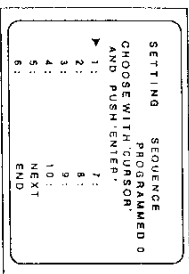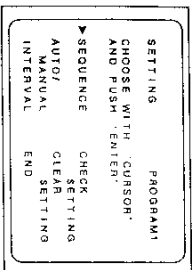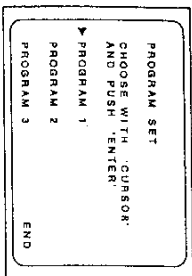

4. Select the number of the program setting desired, then press **ENTER**.
Program settings 1 to 3 are available. In this example, Program 1 is selected. The screen showing the settings for Program 1 is displayed.

SEQUENCE

You can set a playback sequence for up to 20 files.

Creating a new setting

1. Move the cursor to "SEQUENCE," then press **ENTER**.
The playback sequence screen is displayed.

2. To set the first image as the image to be played back, make sure that the cursor is pointing to number 1, then press **ENTER**.
The recorded image on the selected drive will be displayed.

3. Select the recorded image with **FWD** or **REV**, then press **ENTER**.
This selects the first image to be played back.






4. To set another image in succession, make sure that the cursor is pointing to number 2, then press **ENTER**.

Changing a program setting

1. Press **FWD** or **REV** to move the cursor to the image number you wish to change, then press **ENTER**.
To select "NEXT," move the cursor to "NEXT," then press **ENTER**.

Selecting "NEXT":
To playback image number 11 or beyond, press **REV** to move the cursor to "NEXT," then press **ENTER**.
When you have finished setting the playback sequence, move the cursor to "END" on the next page, then press **ENTER**.

When you have finished setting **AUTO/MANUAL**, move the cursor to "END," then press **ENTER**.

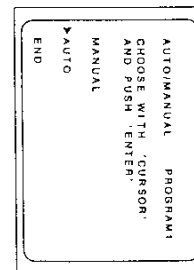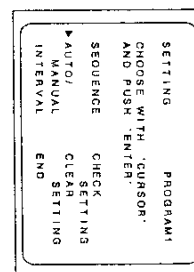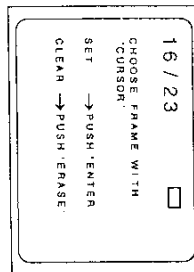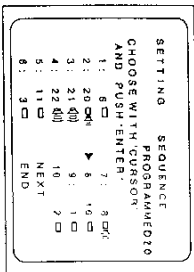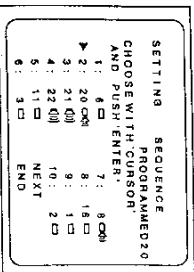

2. Move the cursor, select a new image, then press **ENTER**.
This changes the image.

Clearing an image from a program

1. Press **FWD** or **REV** to move the cursor to the number of the image to be cleared, then press **ENTER**.



2. When the image to be cleared is displayed, press **ERASE**.
This clears the image from the program.

AUTO/MANUAL

1. Move the cursor to "AUTO/MANUAL," then press **ENTER**.
This displays the **AUTO/MANUAL** screen.

2. Move the cursor to **MANUAL** or **AUTO**, then press **ENTER**.

Note: With "MANUAL," you must press **FWD** and **REV** on the Remote Control Unit to change images.
Holding down the **FWD/REW** button will cause the same image to be replayed (except for Still Pictures.)
With "AUTO," the images will be played back automatically according to the predetermined settings.

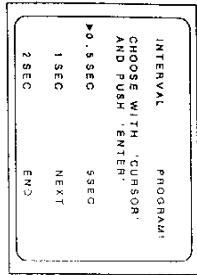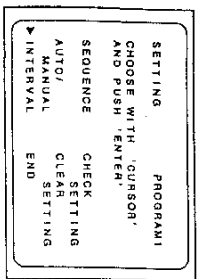

INTERVAL

In this example, the interval is set for a Still Picture.

1. Move the cursor to "INTERVAL," then press ENTER.


The interval screen is displayed.

2. Move the cursor to the playback interval setting desired, then press ENTER.

Note: With the playback interval setting, you can set the playback interval for a Still Picture.

Selecting "NEXT":
To select a setting longer than 10 seconds, press REV to move the cursor to "NEXT," then press ENTER. Select a playback interval on the next page, then press ENTER. The longest time setting available is 30 seconds.



When you have finished setting the playback interval, move the cursor to "END," then press ENTER.

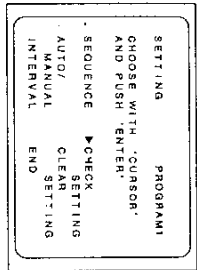

1. Move the cursor to "CHECK SETTING," then press ENTER.


CHECK SETTING

2. This displays the screen with SEQUENCE, AUTO/MANUAL, and INTERVAL. When you have finished checking the settings, move the cursor to "END," then press ENTER.

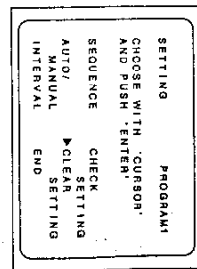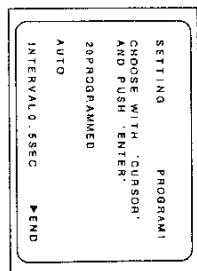


1. Move the cursor to "CLEAR SETTING," then press ENTER.

CLEAR SETTING

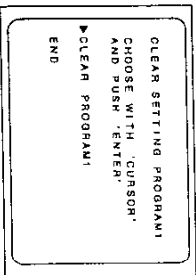


2. Move cursor to "CLEAR PROGRAM1," then press ENTER.

To abort the operation without erasing the program, move the cursor to "END," then press ENTER. You will return to the Program settings screen.

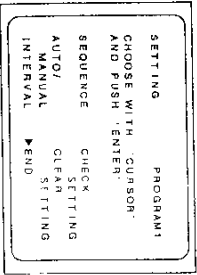


EXIT

1. Move the cursor to "END," then press ENTER. You will return to the Program settings screen.

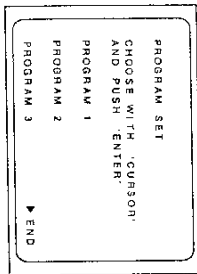


2. To exit the program menu, use FWD or REV to move the cursor to "END," then press ENTER.

This will return you to the Program screen.
If you wish to configure another program, select the program, then repeat the steps in "PROGRAM SETTING" on pages 17-24.

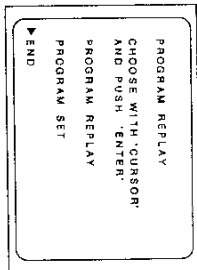


3. To end all program operations, use FWD or REV to move the cursor to "END," then press ENTER.

The program operation will end.

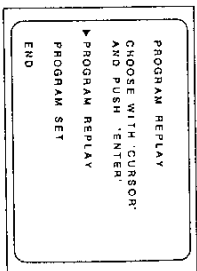


PROGRAM REPLAY

1. Move the cursor to "PROGRAM REPLAY," then press ENTER. The programmed playback screen will be displayed.

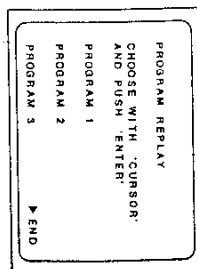

2. Select the number of the program to be played, then move the cursor, then press ENTER.

SEQUENCE, INTERVAL, and AUTOMANUAL will be displayed on the screen according to the settings.

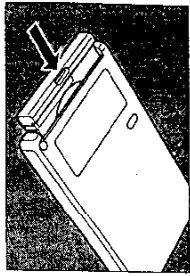

3. Push the battery "drawer" into the slot in the DR-2 until it snaps in place.

⚠ Warning

The battery used in this unit is toxic if swallowed. After removing the battery from your Remote Control Unit, do not leave it in reach of children. If the battery is swallowed, contact a physician immediately.

⚠ Caution

Never put the battery into a fire, and never short, heat, charge, or disassemble the battery. Doing so could cause the battery to explode, resulting in fire, and/or personal injury.

Handling Precautions


- Be careful not to drop the Remote Control Unit. Do not subject it to any type of shock.
- Do not disassemble or attempt to repair the unit.
- Do not touch the battery with a metal instrument, such as pliers.
- Do not use the Remote Control Unit in a very humid, grimy, or dusty environment.
- Do not leave the Remote Control Unit where it may be subjected to extremely high temperatures, such as in direct sunlight, in a closed automobile, on the beach, or in a bathroom.
- Do not leave the Remote Control Unit in a place with excessive humidity, such as in a bathroom or in a smoky or damp kitchen.
- In the unlikely event that the Remote Control Unit fails to function, please bring the unit to the store where you purchased it or to a Ricoh service representative.
- Never disassemble the unit. Doing so is dangerous.

Maintenance and Storage


- Never allow flammable liquids such as paint thinner, benzene, or pesticides to touch the unit. These substances can damage the unit and cause the finish to peel.
- After using Remote Control Unit in such places as a beach or around chemicals, wipe it thoroughly.

Inserting the Battery

A lithium battery (CR2032) is required for DR-2 Remote Control Unit.

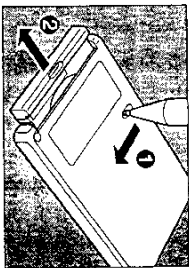

1. Insert a pen point into the hole on the back of the remote control and push the lever to the right. With the pen in that position, pull out the battery "drawer."

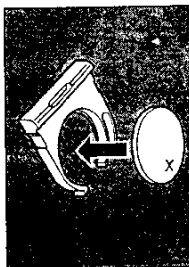

2. Set the button battery with the positive pole (+) facing upwards.

Important: Use only a model CR2032 lithium button battery. Do not use any other type of battery.

Note: With "MANUAL," you must press FWD and REV on the Remote Control Unit to change images.

With "AUTO," the images will be played back automatically according to the predetermined settings.

Important: When playing a program replay, carefully note the following:

- Select the drive indicated in the program settings.
- After completing the program settings, do not erase images or initialize the memory card.
- If the drive is changed or if images are erased after the program settings are completed, the program replay will not function properly.

When the program replay has been completed, move the cursor to "END," then press ENTER.

Troubleshooting

Before sending the unit in for repairs, refer to the following checklist for a possible solution to the problem. If you still cannot correct the problem, please contact a Ricoh service representative.

Power source problems

Symptom	Cause	Remedy
The Remote Control Unit does not work.	Reception is blocked by something or the Remote Control Unit is not pointed at the camera's remote control reception window. The remote control reception window or transmission window is dirty. The lithium battery in the Remote Control Unit is weak.	Remove the obstruction. Clean both windows. Replace the battery with a new lithium CR2032 battery.
Unable to erase.	The camera's main switch is not set to [PLAY (P)]. The memory card is set to "Write Protect."	Slide the camera's main switch to [PLAY (P)]. Set the memory card to "Write Enable."
Unable to change the image in program replay.	The camera is set to pause during playback of a Continuous Still Picture or an Audio. "MANUAL" is selected in the settings for the playback program. The battery has been removed from the camera body.	Release pause and end playback. Press FWD/REV to switch images. Replace the battery and recreate the program.
Program settings disappear.		

30

FCC Notice:

This device complies with Part 15 of the FCC Rules. Operator is subject to the following two conditions:
(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- Properly shielded and grounded cables and connectors must be used for connection to host computer in order to meet FCC emission limits.

32

Specifications

Remote control method: Infrared pulse method

External dimensions:

38 x 62 x 6 mm

Weight: About 11 g. (excluding lithium battery) (0.40 oz.)

Power source: One lithium battery (CR2032), 3 VDC

Range: About 5 meters (16.8 ft.)

31

Ricoh Company, Ltd.
3-32-3 Higashi-shinagawa
Shinagawa-ku, Tokyo
140 Japan
<http://www.ricoh.co.jp/>

Ricoh Corporation
475 Lillard Drive
Sparks, Nevada 89434
U. S. A.
<http://www.ricohcp.com/>

Ricoh Europe B.V.
Groenelaan 3
P.O. Box 114
1180 AC Amstelveen
Holland

Ricoh Photo Products (Asia), Ltd.
Unit D, E & F,
24/F., China Overseas Building,
139 Hennessy Road, Wan Chai
Hong Kong

33